

Operating Instructions Please read these instructions before use




STFM-24 Diagram:

Model:

STFM-24

Page 1 of 1

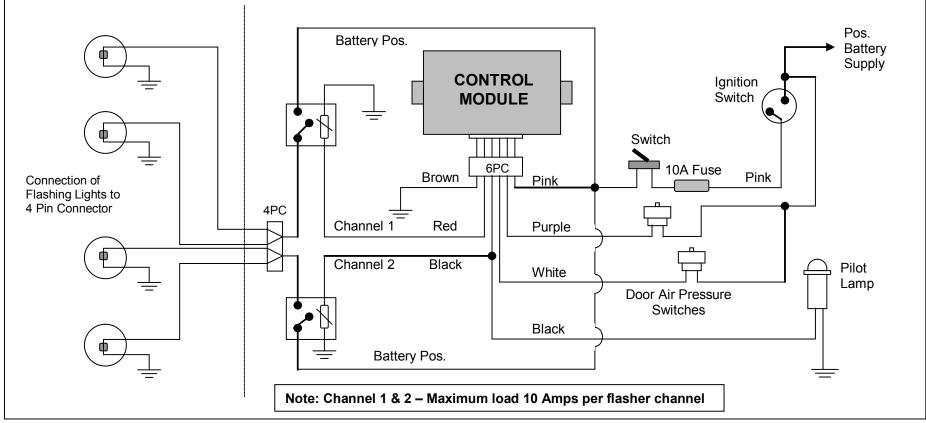

Operation of Control Module

A self-test cycle is activated whenever power is connected to the Control Module. When the door is in the open position (providing air is available) the Control Module will activate the flashing lamps and continue to do so for approximately 22 seconds after the door is closed.

Warranty Conditions: Our products come with guarantees that cannot be excluded under the Australian Consumer Law.

The customer is entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

The customer is also entitled to have the products repaired or replaced if the products fail to be of acceptable quality and the failure does not amount to a major failure.

GSL Electronics (GSL) warrants that its products will, under normal use and service, be free of defects in material and workmanship for a period of two (2) years from the date of the original purchase by the customer as marked on the customer's original invoice. Please refer to our website for full warranty and return information.

GSL Electronics www.gsl.com.au ABN 30 053 250 472



Phone: (02) 9620 9988 Fax: (02) 9620 9899

Unit 2, 110 Station Road, Seven Hills ,NSW, 2147, Australia